

A B C D E F G H I J K L M N O P Q R S

L-MPS-3G-8AT-AP

Layers
SigT, Inc.
 AV & Data Connectivity Solutions

THE DESIGN, CONCEPT AND SPECIFICATIONS REPRESENTED HEREIN ARE UNCLASSIFIED AND SHALL REMAIN THE PROPERTY OF SIGT, INC. ANY REPRODUCTION OR DISSEMINATION OF THIS DOCUMENT IS STRICTLY PROHIBITED WITHOUT THE WRITTEN CONSENT OF SIGT, INC.

SigT, Inc
 1320 E. Saint Andrew Place, Unit D
 Santa Ana, CA 92705
 (714)641-5665


Revisions

BAT
 Dwg. # A
 Rev. 1
 Drawn: WE
 Scale: NTS
 Date: 4/18/2023
 File: BAT-AP

NOTES


STEP 3 →

Using the 4-40 screws and the small black plastic nuts to hold the label strip. Feed the screws first thru the nuts so they can act as clips. Screw on the label strip end pieces the same way using the 4-40 hex screws as well.

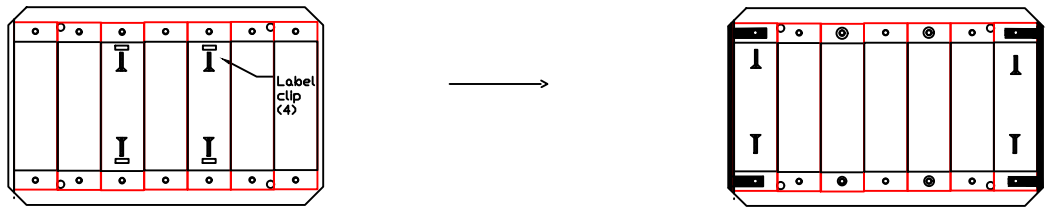


STEP 2 →

Install your L-MPS patch panels using the 4-40 screws and hex wrench provided. Leave out the screws at the corners of the panels at the edge of the adapter plate. This will be used to install the label strip holder in step 3

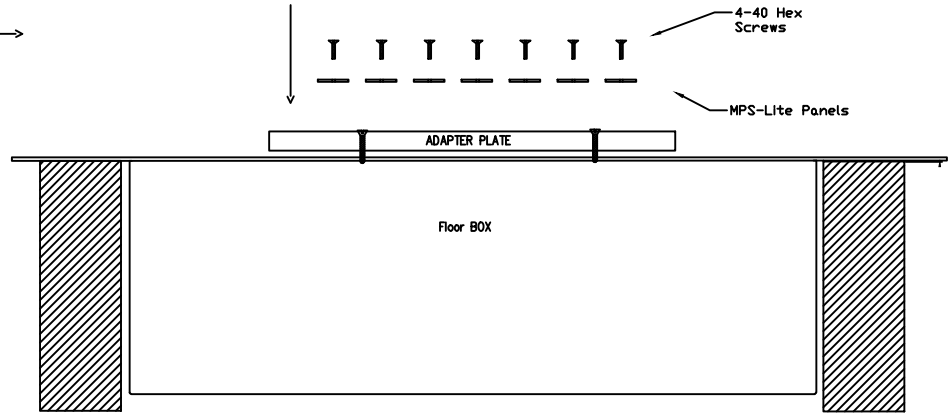

STEP 1 →

Place the gang panel in the floor-box with the 4 mounting screws, install the bottom adapter panel first by drilling into the box with the screws provided

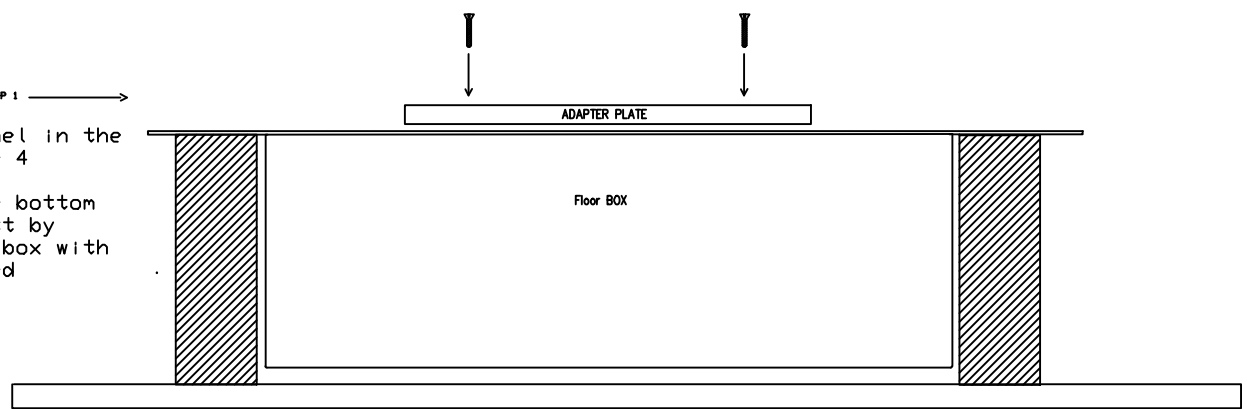

BAT floor box to MPS-Lite Adapter Plate

ASSEMBLY INSTRUCTIONS.

A1

LAST FILE